


AWT0266 System

Assembly Instructions

Greene Galvanized Stairs

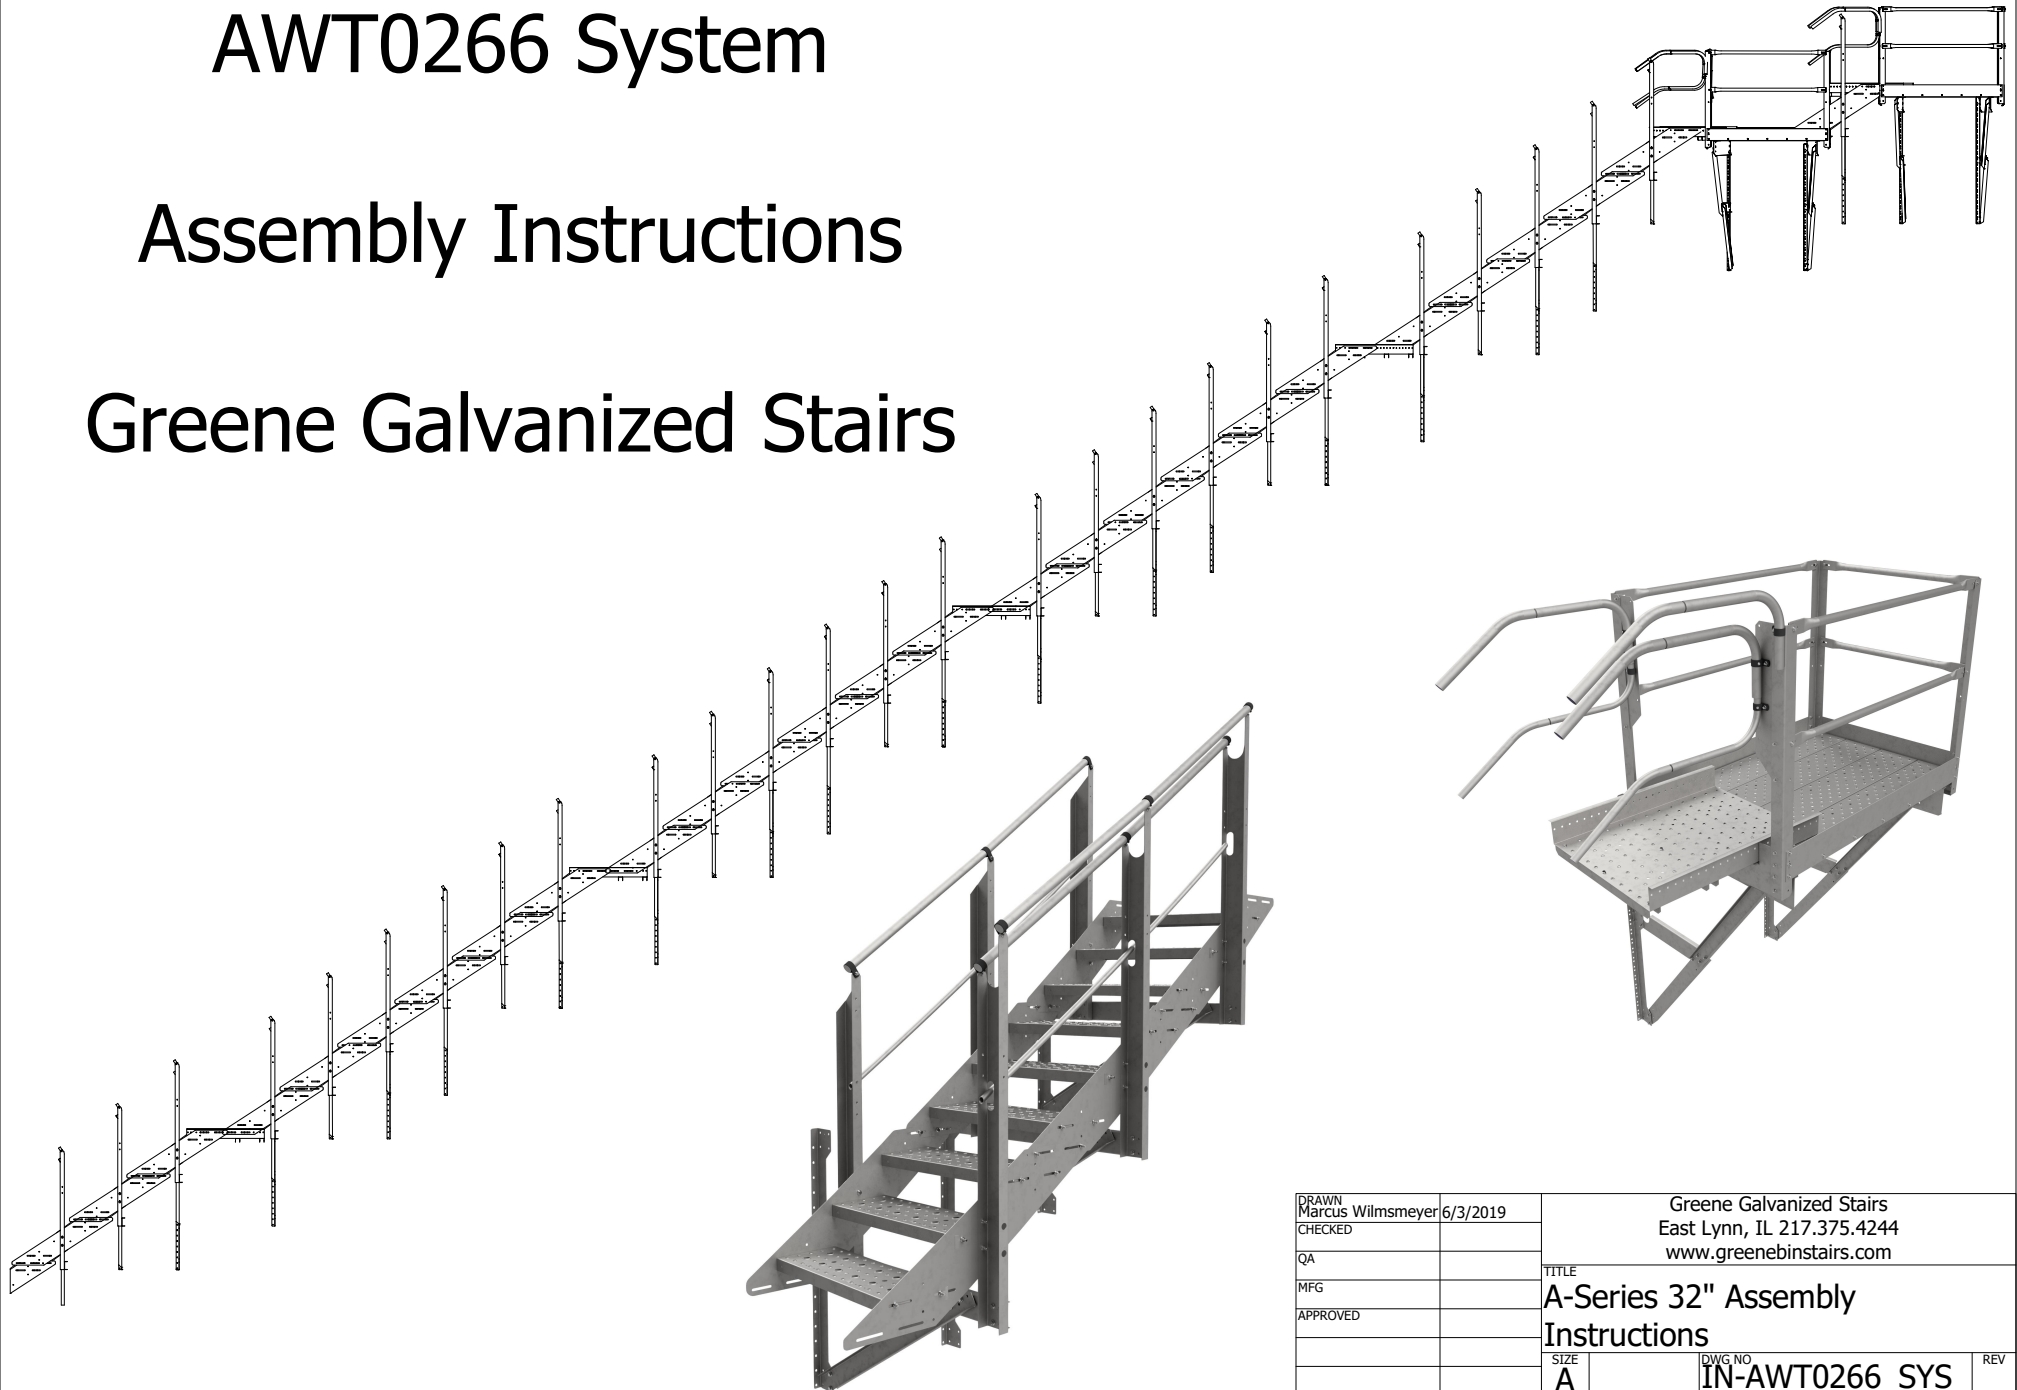


DRAWN Marcus Wilmsmeyer 6/3/2019	Greene Galvanized Stairs East Lynn, IL 217.375.4244 www.greenebinstairs.com		
CHECKED	TITLE A-Series 32" Assembly Instructions		
QA	SIZE A	DWG NO IN-AWT0266_SYS	REV
MFG	SCALE 1 / 94	SHEET 1 OF 3	
APPROVED			

The AWT0266 Sidewall Stairs follow a pattern of Low, High, and High brackets. Please refer to the previous page or the IN-AWT0266 instructions for more information.

The AWT0266 Sidewall Stairs are 3 horizontal bolt spaces apart from each other. If an AWT3600 Landing is present, there are five bolt spaces between stair sections.

There are six AWT0266 Stair Sections (or two repeats of the Low, High, High pattern) between AWT3600 Landings.

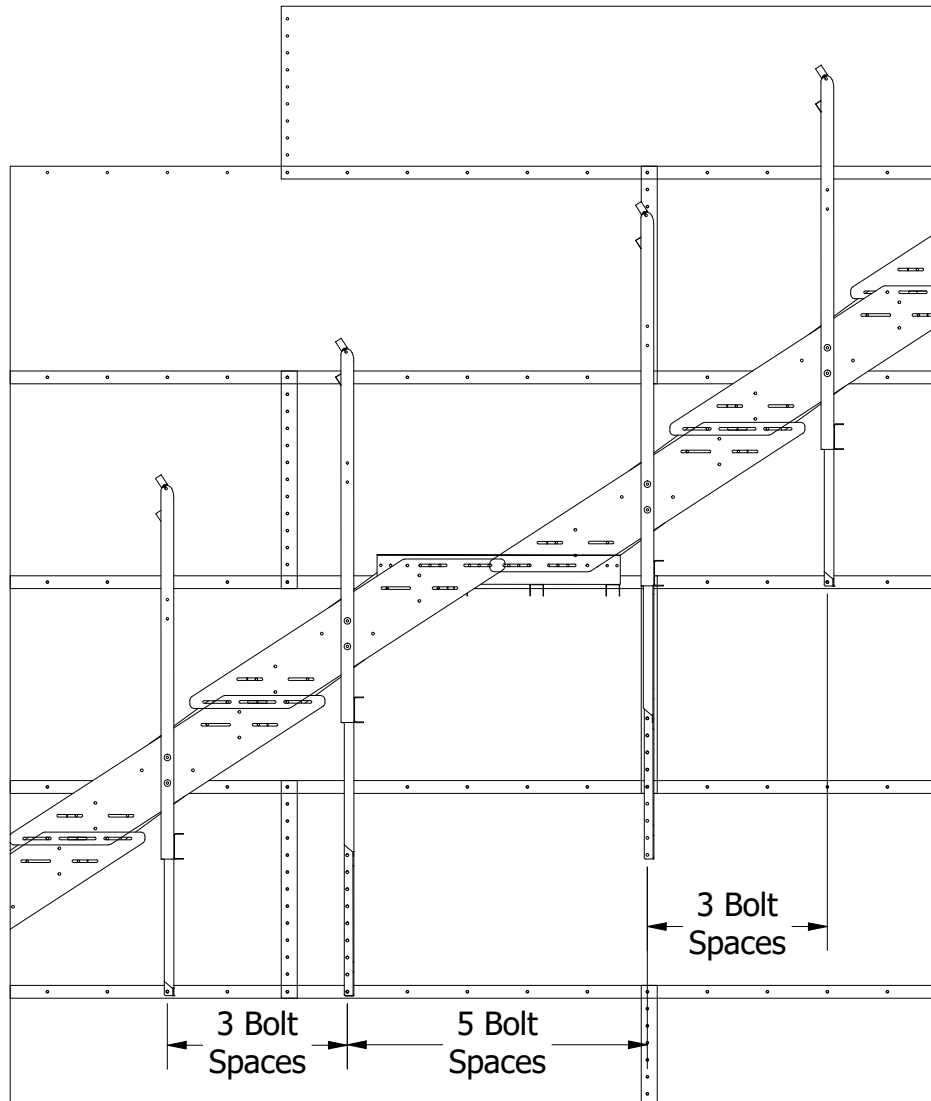

DRAWN Marcus Wilmsmeyer 6/3/2019	Greene Galvanized Stairs East Lynn, IL 217.375.4244 www.greenebinstairs.com	
CHECKED	TITLE	
QA	A-Series 32" Assembly	
MFG	Instructions	
APPROVED	SIZE A	DWG NO IN-AWT0266_SYS
	SCALE 1/30	REV
	SHEET 3	OF 3