
CC3748 Crossover Platform








CC3748 Crossover Package


PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	CS-37048	Plate, Tread, Crossover Platform
2	2	CS-37010	Brace, Tread, Crossover Platform
3	4	CS-37020	Angle, Post, Crossover Platform
4	4	HRC1500	Handrail Clamp for 1.5 in
5	4	HRC1000	Handrail Clamp for 1 in
6	2	TR1003900	1" Midrail, 39" no swage
7	2	TR1503900	1.5" Handrail, 39" no swage

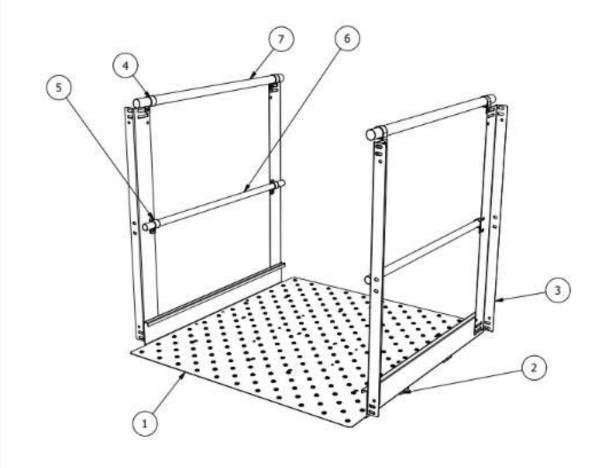


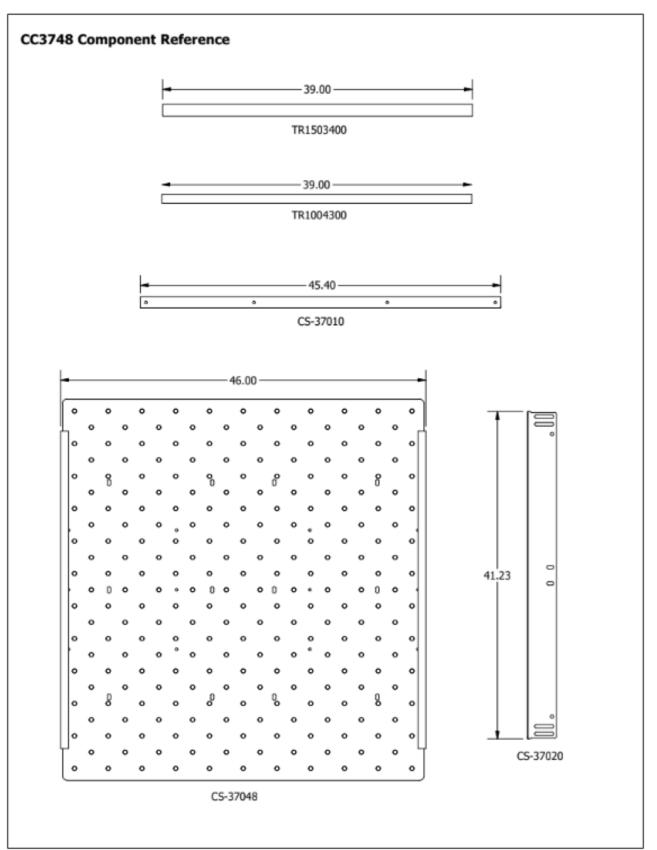

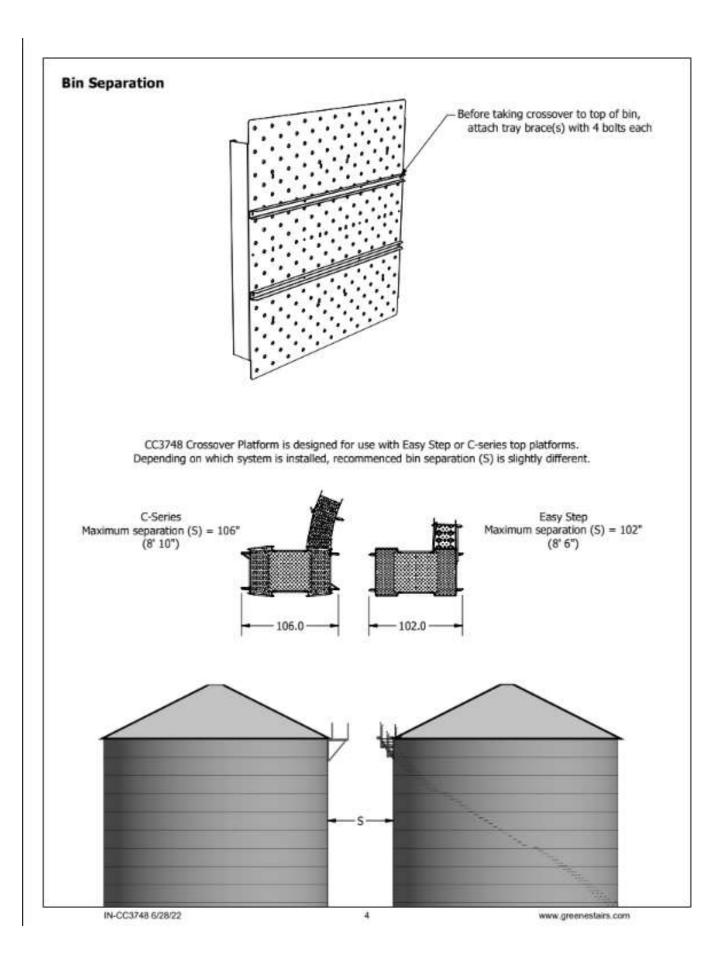

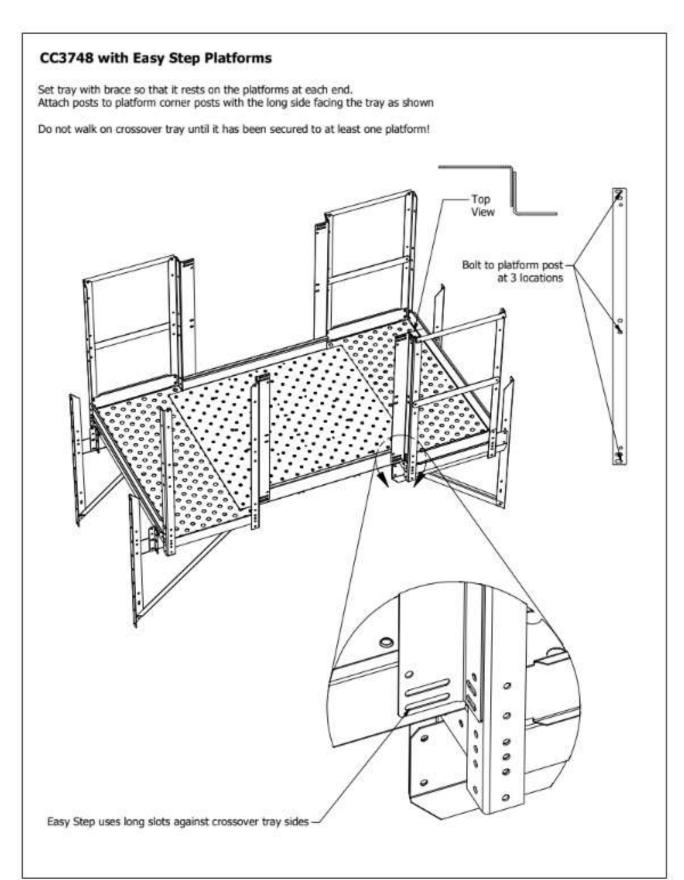

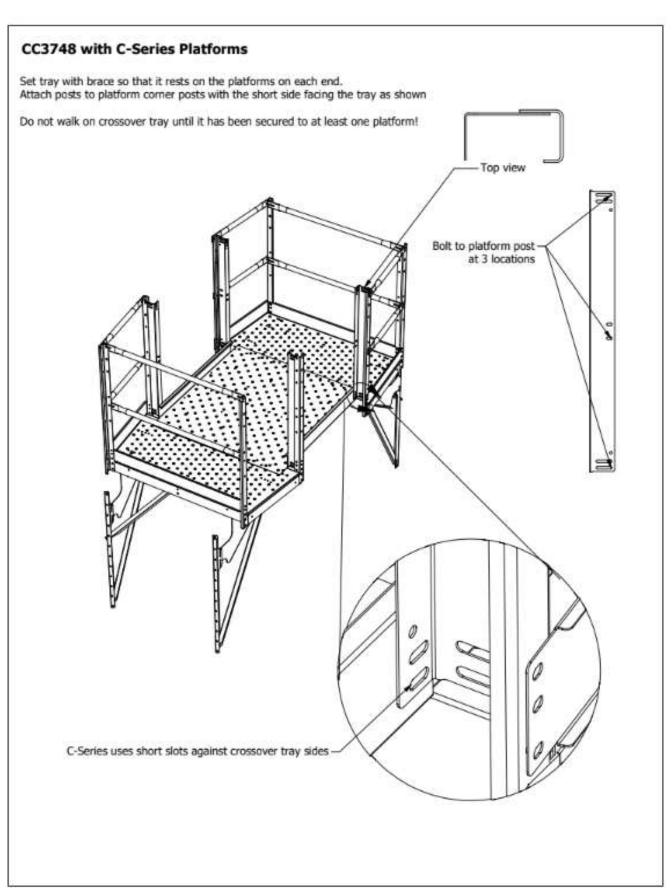

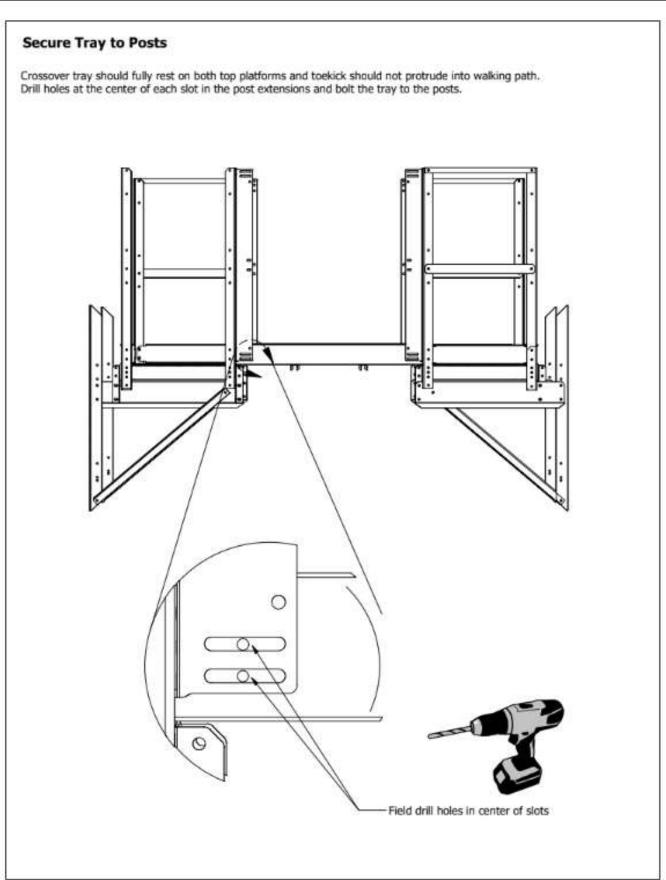


Attach Handrail

Bolt handrail clamps to the posts, insert tube rail and tighten.


1" Tube located at 21.5" (Midrail)

1.5" Tube located at 42.5" (Handrail)

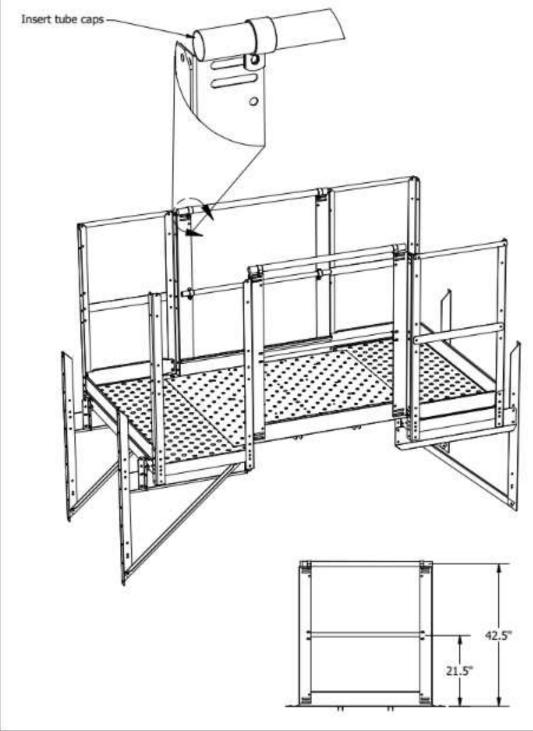


Attach Plates

Use the self-tapping floor screws to attach the crossover tray to the platform surfaces to prevent surface deformation

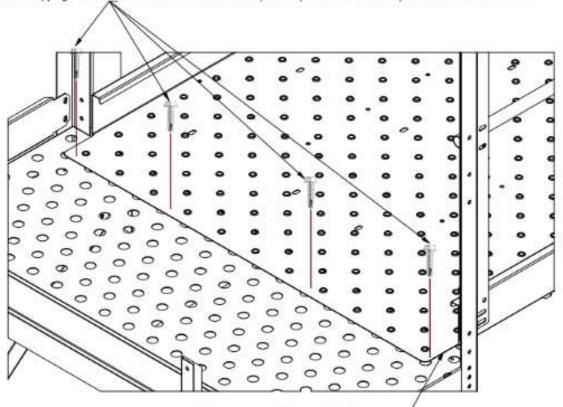

Trim excess toekick material if necessary (side flanges should not protrude beyond platform post)



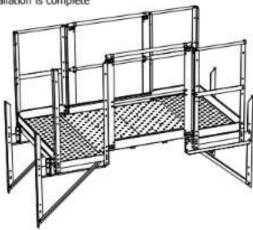

La Street Communication Manual Las Streets St. Name 2011